

DAILY REFERENCE GUIDE



THANK YOU FOR PURCHASING A HOTPOINT-ARISTON PRODUCT

To receive more comprehensive help and support, please register your product at www.hotpoint-ariston.com/register

 


You can download the Safety Instructions and the Use and Care Guide by visiting our website www.hotpoint.eu and following the instructions on the back of this booklet.




Read the safety instructions carefully before using the product

PRODUCT DESCRIPTION

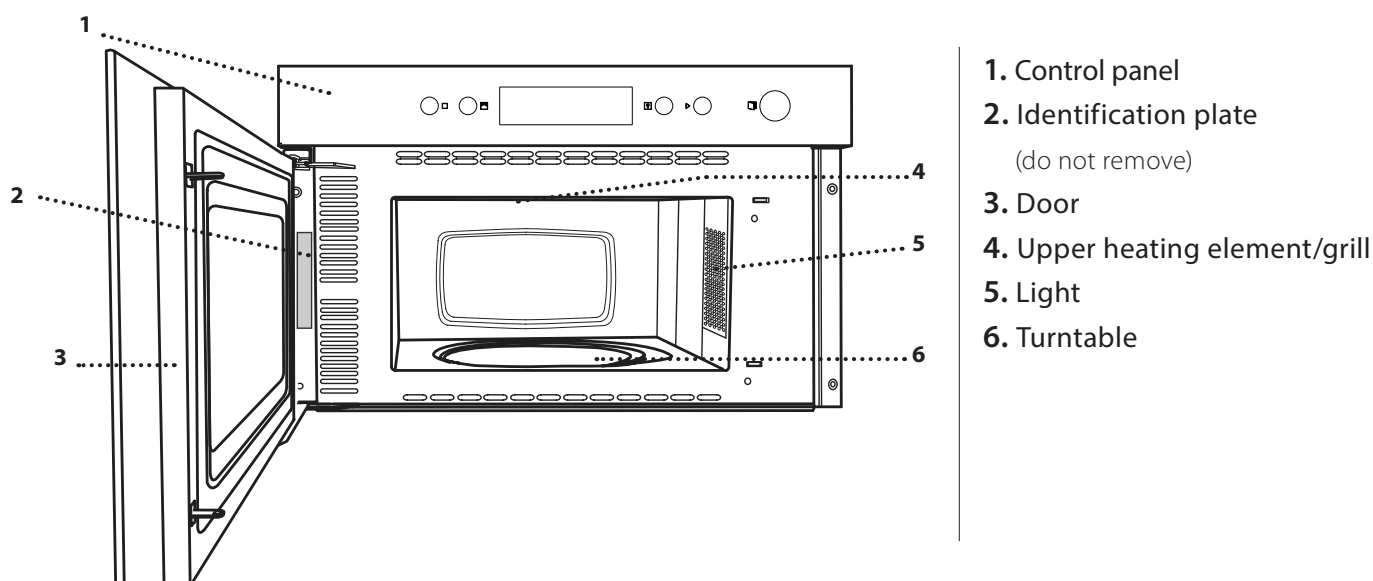

1. Control panel
2. Identification plate
(do not remove)
3. Door
4. Upper heating element/grill
5. Light
6. Turntable

 CONTROL PANEL

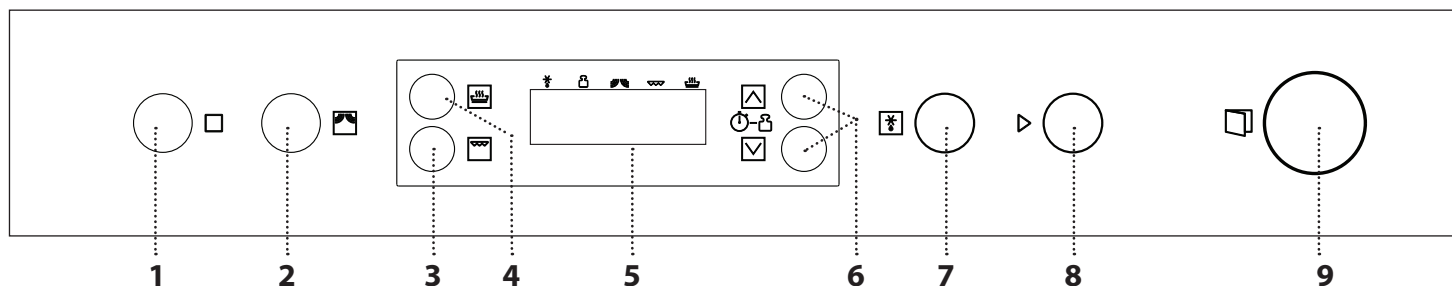

1. STOP

For stopping a function or an audible signal, cancelling the settings and switching off the oven.

2. MICROWAVES FUNCTION / POWER

For selecting the microwaves function and setting the required power level.

3. GRILL FUNCTION

4. CRISP FUNCTION

5. DISPLAY

6. + / - BUTTONS

For adjusting the settings of a function (e.g. length, weight).

 
7. DEFROST DYNAMIC

8. START

For starting a function. When the oven is switched off, it activates the "Jet Start" microwave function.

9. DOOR OPENING BUTTON


TURNTABLE

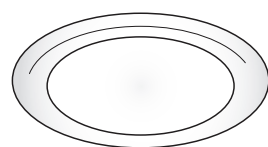

containers and accessories.


Placed on its support, the glass turntable can be used with all cooking methods. The turntable must always be used as a base plate for other

 TURNTABLE SUPPORT

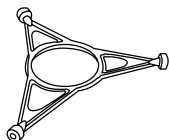


Only use the support for the glass turntable. Do not rest other accessories on the support.

 CRISP PLATE

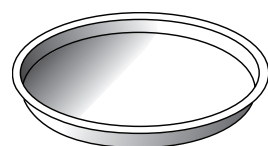


Only for use with the specific "Crisp Dynamic" function. The crisp plate must always be placed in the centre of the glass turntable and can be preheated when empty, using the special function for this purpose only. Place the food directly on the crisp plate.

 HANDLE FOR THE CRISP PLATE

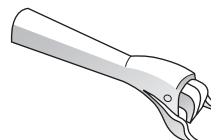

Useful for removing the hot crisp plate from the oven.

 
WIRE SHELF

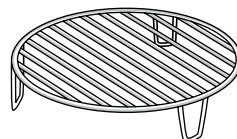

come into contact with other surfaces.

This allows you to place food closer to the grill, for perfectly browning your dish. Place the wire shelf on the turntable, making sure that it does not

 COVER (IF SUPPLIED)

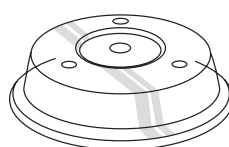

levels. It is not suitable with any of the grill functions (including "Crisp Dynamic").

Useful for covering food while it is cooking or heating in the microwave.

The cover reduces splashes, keeps foods moist and can also be used to create two cooking

Other accessories that are not supplied can be purchased separately from the After-sales Service.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.

Metallic containers for food or drink should never be used during microwave cooking.

Always ensure that foods and accessories do not come into contact with the inside walls of the oven.

Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.

FUNCTIONS



MICROWAVES

For quickly cooking and reheating food or drinks.

POWER	RECOMMENDED FOR
750 W	Quickly reheating drinks or other foods with a high water content or meat and vegetables.
500 W	Cooking fish, meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes.
350 W	Slow, gently cooking. Perfect for melting butter or chocolate.
160 W	Defrosting frozen food or softening butter and cheese.
0 W	When using the timer only



CRISP DYNAMIC

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special crisp plate.

DURATION (min)	RECOMMENDED FOR
3 - 4	Cookies (8- 10 pieces)
7 - 8	Frozen pizza (350 g)
7 - 9	Sponge cake (500 g)
8 - 10	Fish fingers (8 pieces)
9 - 10	Pizza (350 g)
10 - 14	French fries (200 g - 300g)
13 - 15	Quiche Lorraine (500 g)

Required accessories: Crisp plate, handle for the crisp plate



GRILL

For browning, grilling and gratins when used alone. We recommend turning the food during cooking. For best results, preheat the grill for 3-5 minutes. For quickly cooking and gratinating dishes, combines with microwaves.

POWER	DURATION (min)	RECOMMENDED FOR
500 W	14 - 18	Lasagne (400 - 500 g)
500 W	10 - 14	Fish (600 g)
500 W	40 - 50	Chicken (whole; 1-1.2 kg)
350 W	15 - 18	Fish gratin (600 g)
0 W	-	Browning only

Recommended accessories: **wire shelf**



DEFROST DYNAMIC

For quickly defrosting food such as meat, poultry and fish weighing between 100 g and 2 kg. Food should be placed directly onto the glass turntable. Turn the food when prompted.

DAILY USE

. SELECT A FUNCTION

Simply press the button for the function you require to select it.

. SET THE LENGTH



After selecting the function you require, use or to set the length for it to run.

The time can be changed during cooking by pressing or or by increasing the length for 30 seconds each time by pressing .

. SET THE POWER OF THE MICROWAVE



Press as many times as required to select the power level for the microwave.

To use the microwave in combination with the grill, select the "Grill" function by pressing and then use to set the microwave power.

 
Please note: You can also change this setting during cooking by pressing .

. DEFROST DYNAMIC



Press , then use or to set the weight of the food.

During defrosting, the function will pause briefly to allow you to turn the food.



Once the operation is complete, close the door and press .

. ACTIVATE THE FUNCTION

Once you have applied the settings you require, press to activate the function.

You can press at any time to pause the function that is currently active.

. SAFETY LOCK



This function is automatically activated to prevent the oven from being switched on accidentally. Open and close the door, then press to start the function.

. PAUSE

To pause an active function, for example to stir or turn the food, simply open the door. To start it up again, close the door and press .

. JET START

When the oven is switched off, press to activate cooking with the microwave function set at full power (750 W) for 30 seconds.

Every time the button is pressed again, the cooking time will be increased by a further 30 seconds.

. SET THE TIME



With the oven switched off, press until the two digits for the hour (on the left) starting flashing.

Use or to set the correct hour and press to confirm: The minutes will flash on the display.

Use or to set the minutes and press to confirm.

Please note: You may need to set the time again following lengthy power outages.

. TIMER

When the oven is switched off, the display can be used as a timer. To activate the function and set the length of time you require, use or . Press to set the power to 0 W, then press to activate the countdown.

Please note: The timer does not activate any of the cooking cycles.

To stop the timer at any time, press .

www.hotpoint.eu Download the Use and Care Guide from **www.hotpoint.eu** for helpful cooking tables and the table of tested recipes, compiled for the certification authorities in accordance with standards IEC 60705 and IEC 60350.

CLEANING

- Do not use steam cleaners.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

INTERIOR AND EXTERIOR SURFACES

- Clean the surfaces with a damp cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Clean the glass in the door with a suitable liquid detergent.
- At regular intervals, or in case of spills, remove the turntable and its support to clean the bottom of the oven, removing all food residue.
- The grill does not need to be cleaned as the intense heat burns away any dirt. Use this function on a regular basis.

ACCESSORIES

All accessories are dishwasher safe with the exception of the crisp plate. The crisp plate should be cleaned using water and a mild detergent. For stubborn dirt, rub gently with a cloth. Always leave the crisp plate to cool down before cleaning.

TROUBLESHOOTING



Download the Use and Care Guide at www.hotpoint.eu for more information

Problem	Possible cause	Solution
The oven does not work	Power cut. Disconnection from the mains.	Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists.
The display is showing "Err".	Software fault.	Contact you nearest After-sales Service Centre and state the letter or number that follows "Err".

PRODUCT FICHE

A complete specification for the product, including energy efficiency ratings, can be downloaded from our website www.hotpoint.eu

HOW TO OBTAIN THE USE AND CARE GUIDE

 
> Download the Use and Care Guide from our website www.hotpoint.eu (you can use this QR code), specifying the product's commercial code.

> Alternatively, contact our After-sales Service



CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our After-sales Service, please state the codes provided on your product's identification plate.

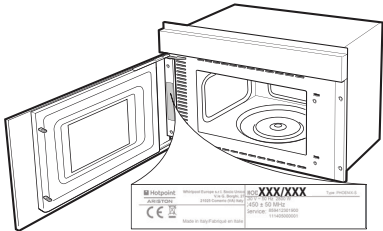

400010855539

Printed in Italy